



Sedgefield Parish Hall

Main Hall Projector

Parish Hall staff will ensure main stage switches are turned on to provide power to the projector.

Both controllers are stored in the on-stage amp cabinet, in one of the top three drawers.

The white and blue screen control (shown right) is used to raise and lower the projector screen. In the absence of the controller, there is also a wall-mounted power unit above the amp cabinet with direction arrows on the side.



The white and black controller (shown below) controls the projector. Point the controller at the projector (in the middle of the lighting bar above the dancefloor) and press the power button. There is a light on the projector which is visible from the stage and should turn green. You will also hear a beep and the low hum of the projector to indicate that it is running. It may take a short while for the projector to boot up.

On the wall behind the amp rack are connection points (below). Users are required to bring their own cables to connect their devices to the projector.

